

## Snow Build-up on and around Propane Tanks

The Floodwood Gas Co. has received multiple questions regarding snow around and on top of propane tanks. Snow buildup on your propane tank can affect the performance of the propane system. Please review the below information from the Minnesota Propane Association regarding snow accumulation.

### Clear driveways and pathways to propane tanks.

- Keep the tank area and a path to the tank free of snow. (See photo)
- This ensures that you, your propane supplier, and emergency personnel can access your tank in the event of an emergency
- Please remember that a propane delivery truck needs at least a 10-foot-wide path to be able to deliver fuel to your home.
- When plowing, snow blowing, or shoveling, do not push or pile snow around your tank, meter, regulator, or piping.




### Keep snow and ice from accumulating on propane equipment.

- Snow or ice accumulation can potentially cause parts of your propane system to crack or break, resulting in a gas leak.
- When your tank is completely covered in snow, it insulates your tank. This can create issues with the propane being able to vaporize. It could cause your system to stop working, even if you still have propane in the tank.
- It is your responsibility to make sure that all propane pipes, valves, regulators, and tanks are clear of snow and ice. (See photo #2, these tanks are covered and creating a dangerous situation)
- Gently brush away snow or ice that has accumulated around the tank, meter, regulator, and any other piping.



### Keep vents clear.

- Appliance vents and chimney flues must ALWAYS be clear of snow or ice.
- Some homes may have “direct” vents, which are close to the ground.
- Improper venting can cause carbon monoxide to become trapped in your home, causing serious illness or even death

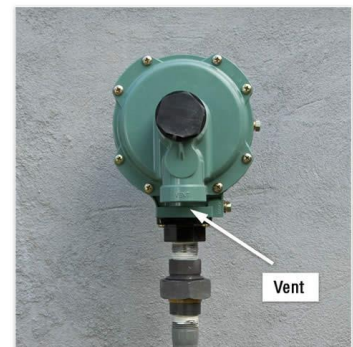

#3 Regulator on side of house, showing vent. Vent needs to be clear of snow and ice.